

## Plastic Extruders Ltd

Russell Gardens, Wickford, Essex,  
SS118DN, England  
Sales Tel: +44(0)1268 571116  
Fax: +44(0)1268 560027  
[www.plastex.co.uk](http://www.plastex.co.uk)  
e-mail: [sales@plastex.co.uk](mailto:sales@plastex.co.uk)



## Plastex Matting Inc



120 55th St NE, Fort Payne, Alabama, AL  
35967, USA  
Sales Tel: 256 845 7725  
Fax: 256 845 6786  
[www.plastexmatting.com](http://www.plastexmatting.com)  
e-mail: [sales@plastexmatting.com](mailto:sales@plastexmatting.com)

# PLASTEX LOK INSTRUCTIONS


Nov 13

## JOINING THE TILES

- a. Position the tiles with the “finger” clips facing the same directions (1, 2).  
“m” stands for male, with finger clips,  
“f” for female, with holes to fit finger clips;

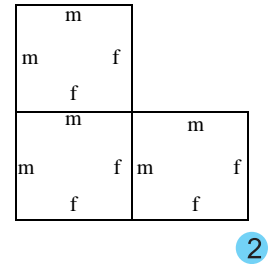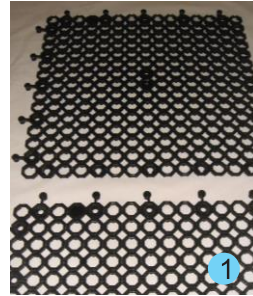


- b. Position the “finger” clips below each corresponding hole (3)

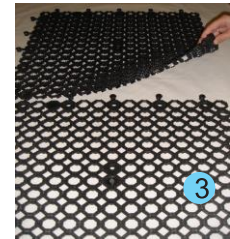

- c. Using a rubber mallet, bang the top of all holes to join the tiles together (4)




- d. Tiles joined with head of fingers showing through joining holes (5).

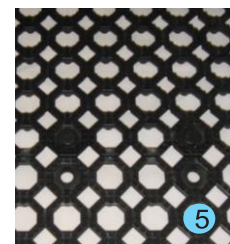

Note: the pictures shown in this guide are for illustrative purposes only.

## FITTING THE EDGINGS

1. Familiarise with the three kinds of edgings: male (6), female (7) and corner (8);

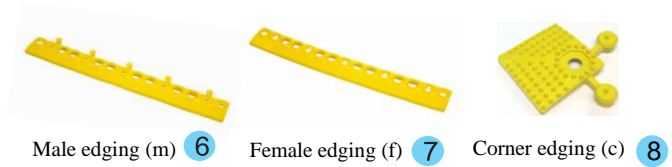


2. Once the tiles are joined together, you need to know the type of edging required for each tile (9);


Note: the pictures shown in this guide are for illustrative purposes only. Type of edgings may vary from diagram shown in picture 9.



3. Position the finger clips of the male edgings below the corresponding hole of the tile and use a rubber mallet to join them to the tiles (10);

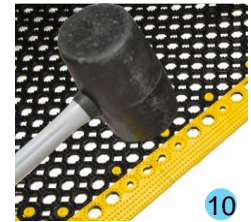

4. Position the holes of the female edgings above each corresponding finger clips of the tile and use a rubber mallet to join them to the tiles (11);

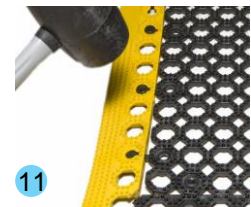

5. For external or internal corners, position the finger clips of the corner edging below the holes of the tiles and use a rubber mallet to join them to the tiles (12).

