
Plastex Lok

Installation instructions




JOININGTHETILES

a) Position the tiles with the "finger" clips facing the same direction. "M" stands for male, with finger clips, "F" for female, with holes to fit finger clips.

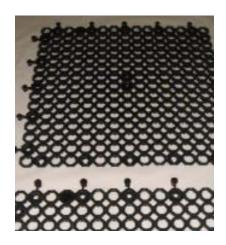

b) Position the "finger" clips below each corresponding hole

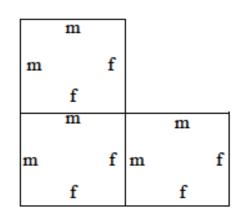

c) Using a rubber mallet, bang the top of all holes to join the tiles together





b) Tiles joined with head of fingers showing through joining holes



Plastex Matting Inc.

|20 55th St NE Fort Payne, AL 35967 +| 256 845 7725 USA + UK manufactured matting products: **plastexmatting.com**


Plastex Lok

Installation instructions



FITTING THE EDGINGS

a) Familiarize yourself with the three kinds of edgings: male, female and corner

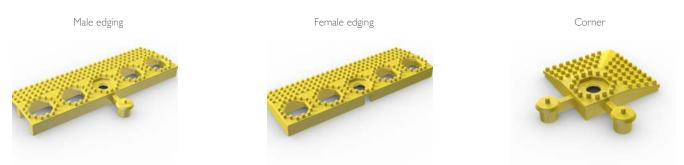

b) Once the tiles are joined together, you need to know the type of edging required for each tile



d) Position the holes of the female edgings above each corresponding finger clips of the tile and use a rubber mallet to join them to the tiles



c) Position the finger clips of the male edgings below the corresponding hole of the tile and use a rubber mallet to join them to the tiles



e) For external or internal corners, position the finger clips of the corner edging below the holes of the tiles and use a rubber mallet to join them to the tiles



and a

If you would like to reinforce the connection between the ends of two edging pieces, you can use a connector clip. These clips, available in black or yellow, are supplied with the edging (one clip per piece).